



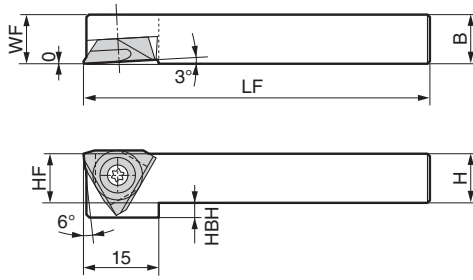

## Front Turning

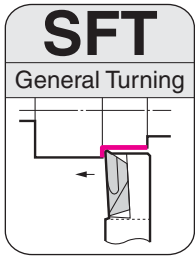

### Parts


	
	(For Torx holes)
Screw	Wrench
TFR33○○	BFTX0410NSW RT08

### Holders

Cat. No.	Stock	Dimensions (mm)						Applicable inserts
		Height H	Width B	Length LF	Cutting edge distance WF	Cutting edge height HF	Step HBH	
SFT R1010	●	10	10	120	10	10	3	TFR33○○
SFT R1212	●	12	12	120	12	12	1	
SFT R1616	●	16	16	120	16	16	—	
SFT R2020	●	20	20	120	20	20	—	

### Inserts

Cat. No.	Stock	Dimensions (mm)			Applicable holders
	ACZ150	Inscribed circle IC	Width of cut CW	Nose radius RE	
TF R3300	●	9.525	4.76	—	SFT R○○○○
TF R3305	●	9.525	4.76	0.05	
TF R3315	●	9.525	4.76	0.15	
TF R3320	●	9.525	4.76	0.20	

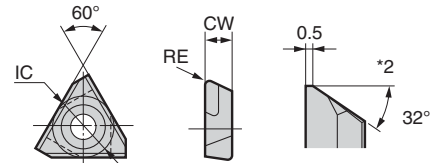

\*1 Maximum cutting amount is 4.0 mm  
\*2 Indicates the angle when the holder is set